EUROCAVE

Wine cabinets installations La Première, Pure, Revelation and the champagne cabinet flush-fitting diagrams

La Première, Pure, Revelation and the champagne cabinet dimensions

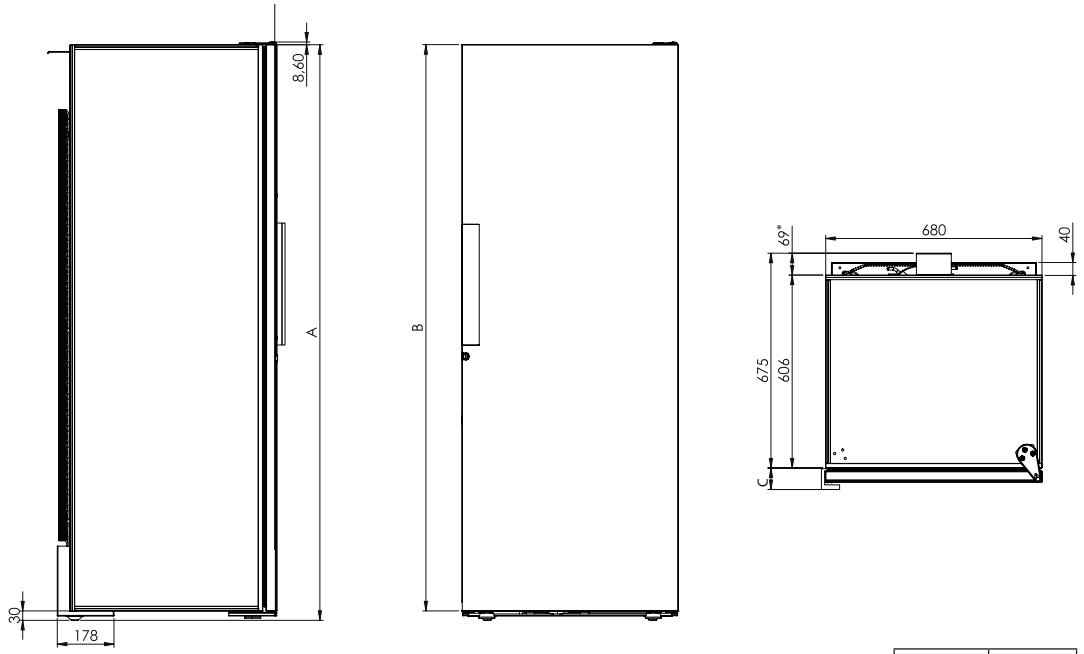

	A (mm)[1]	B (mm)
LARGE: V-LAPREMIERE-L, S-LAPREMIERE-L, S-PURE-L, E-PURE-L, D-PURE-L, V-PURE-L, V-REVEL-L, V-CHAMP-L	1810	1780
MEDIUM: V-LAPREMIERE-M, V-PURE-M, S-PURE-M	1464	1434
SMALL: V-LAPREMIERE-S, V-PURE-S, S-PURE-S, V-REVEL-S, V-CHAMP-S	945	915

C (mm) with handle[2]	
Black Piano Door[3]	75
Full Glass Door[3]	75
Glass door/Solid door	48

* Rear Stop. Space for ventilation at the rear of the cabinet = 29 mm. 1 Adjustable feet at the lowest position. 2 For Full Glass and Black Piano doors only: depth of the door without handle = 45mm / depth of the handle only = 30mm. 3 Only available on Pure and Revelation ranges.

Flush-fitting dimensions to be applied

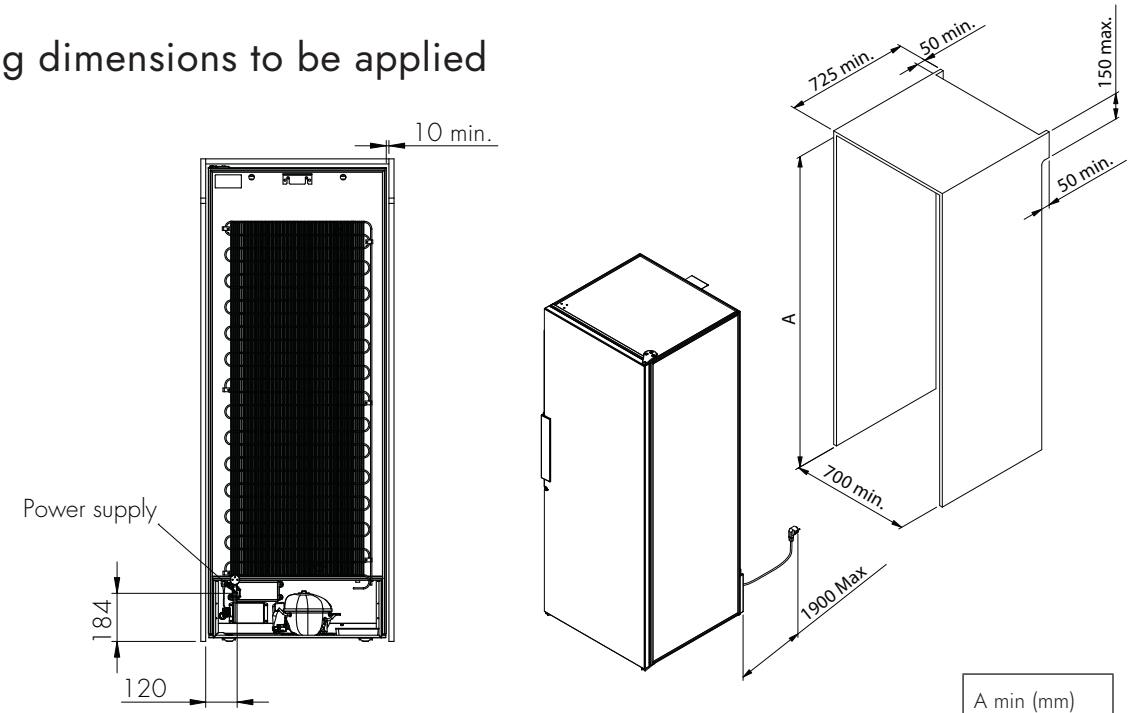

	A min (mm)
LARGE: V-LAPREMIERE-L, S-LAPREMIERE-L, S-PURE-L, E-PURE-L, D-PURE-L, V-PURE-L, V-REVEL-L, V-CHAMP-L	1825
MEDIUM: V-LAPREMIERE-M, V-PURE-M, S-PURE-M	1479
SMALL: V-LAPREMIERE-S, V-PURE-S, S-PURE-S, V-REVEL-S, V-CHAMP-S	960

EUROCAVE

Wine cabinets installations La Première, Pure, Revelation and the champagne cabinet flush-fitting diagrams

Dimensions and ventilation openings to be observed

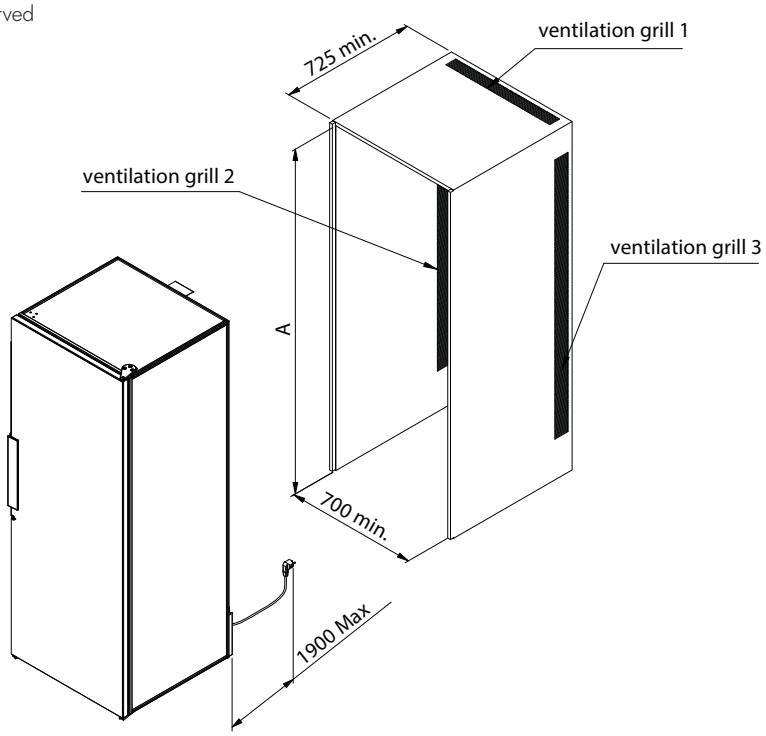

	A min (mm)	Ventilation grill 1 (cm^2)	Ventilation grill 2 (cm^2)	Ventilation grill 3 (cm^2)
LARGE: V-LAPREMIERE-L, S-LAPREMIERE-L, S-PURE-L, E-PURE-L, D-PURE-L, V-PURE-L, V-REVEL-L, V-CHAMP-L	1825	350	750	750
MEDIUM: V-LAPREMIERE-M, V-PURE-M, S-PURE-M	1479	350	600	600
SMALL: V-LAPREMIERE-S, V-PURE-S, S-PURE-S, V-REVEL-S, V-CHAMP-S	960	350	350	350

Installation

Place your cabinet in the desired location.
It must be open to the outside and well ventilated (not in an enclosed cupboard, for example), not be too damp (utility room, laundry room, bathroom...), have a flat, stable floor, be supplied with power (standard outlet, 16 A, earthed with 30mA* circuit breaker).
Take the lead (which you will find in your cabinet's "accessories" bag) and plug it into the socket, located at the back of the cabinet, on the bottom left-hand side (see diagram below). Wait 48hrs before switching on your cabinet.

Stop installation

Install the stop (which is located in the accessories bag) at the back of the cabinet (see diagram). This allows a space of 7 cm to be maintained between the wall and the rear of the cabinet. This space allows your cabinet's power consumption to be optimised.
Place the 2 caps in the 2 holes at the top of the cabinet. Do not push the caps all the way in, allow the rear stop to be fitted. Slide the rear stop between the caps and the wall of the cabinet, then push the 2 caps all the way in.

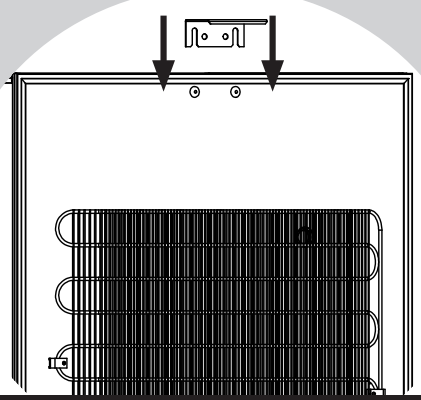

*not applicable to some countries.

Installing two cabinets side by side

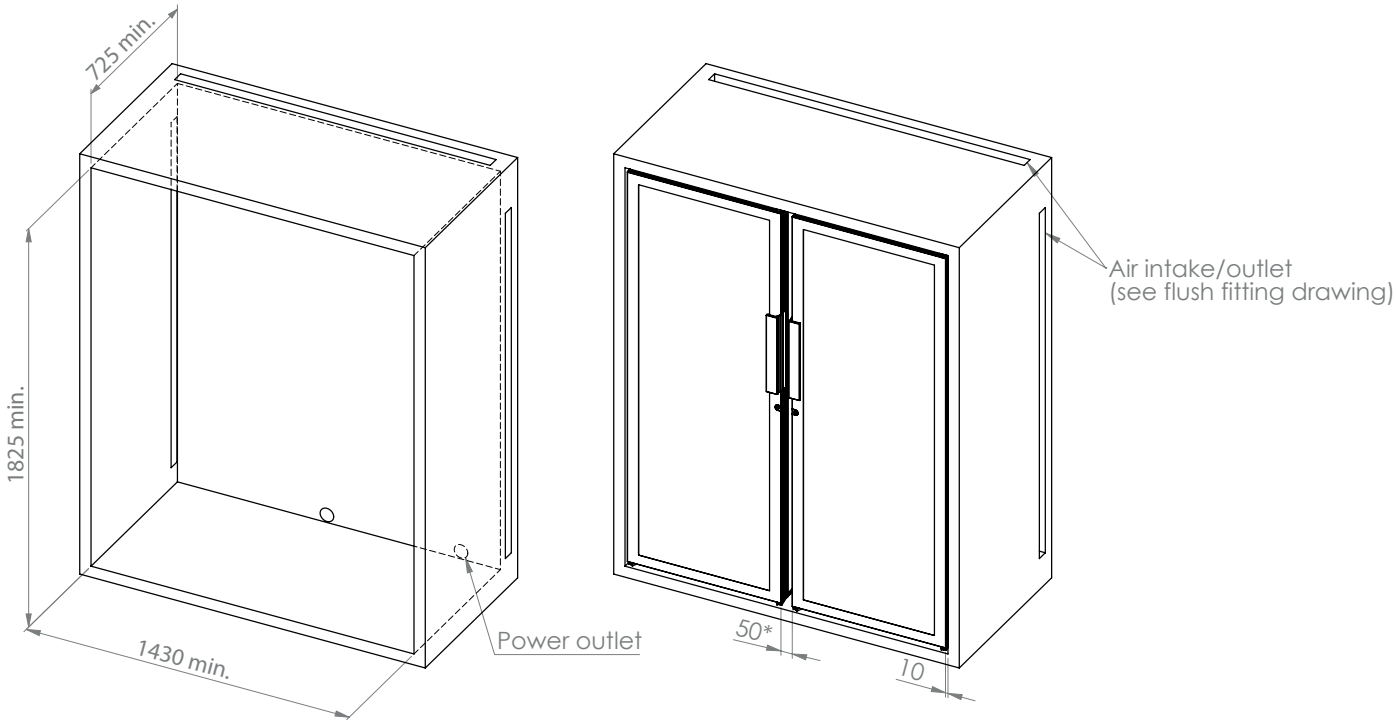

* please note : 20 mm between the two wine cabinets can be enough if the humidity rate of the room where the cabinets are installed is between 55% and 60%. Above 70% of humidity, a space of 50 mm between the two cabinets must be respected in order to ensure a good air circulation between the 2 cabinets and avoid any risk of condensation, as this could lead to mold.

Installing three cabinets side by side

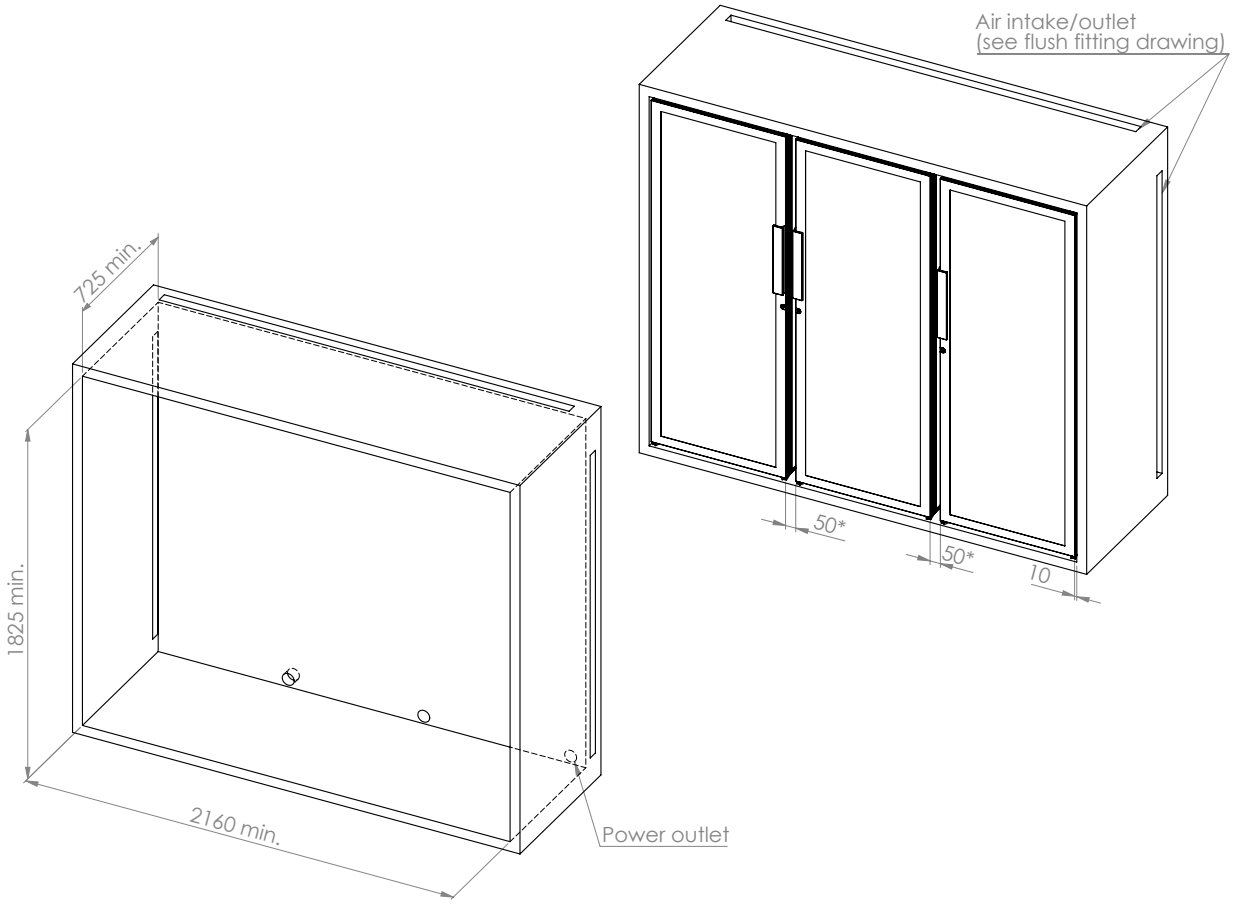

* please note : 20 mm between the two wine cabinets can be enough if the humidity rate of the room where the cabinets are installed is between 55% and 60%. Above 70% of humidity, a space of 50 mm between the two cabinets must be respected in order to ensure a good air circulation between the 2 cabinets and avoid any risk of condensation, as this could lead to mold.

11/2023 - Groupe Eurocave - Photos are not contractually binding.