

## REPLACING YOUR EUROCAVE CHARCOAL FILTER

The filter should be replaced **every 12 months**. If this is not done, the cabinet may accumulate condensation and develop mould. The filter also protects the cabinet from the circulation of bad odours, which could affect the wine.


How to check with your filter is due for replacement:

Press the  button.

### PART I: REPLACING THE FILTER

Step 1: Locating the filter

The filter is housed in the ventilation hole, to the left hand side near the top of the wine cabinet.

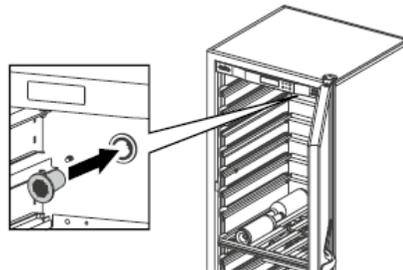

Step 2: Before you start

You may need to remove the top two levels of wine and top two shelves to access the filter.

Step 3: Removing the old filter

Pull out the old filter, it may need a twist and a pull.

Step 4: Inserting new filter

Simply insert by pushing the new filter gently into the ventilation hole.

*For more information, please refer to the user manual for your wine cabinet.*

### PART II: RESETTING THE FILTER COUNTER

If your model has a filter counter this will need to be reset. This counts down the days (from 365) until your next filter is due to be changed.



Note there are two different types of display panels:

TYPE 1 (2010 TO PRESENT)




TYPE 2 (2006-2009)



### TYPE 1 DISPLAY PANEL INSTRUCTIONS

1. Press and hold the  key for a few seconds. The display will flash:

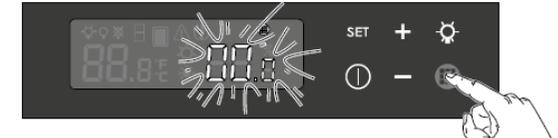

2. Then press the  key to set the countdown to 365:



3. Press the  key to confirm. The icon will disappear:



PTO

## TYPE 2 DISPLAY PANEL INSTRUCTIONS

1. Press the  button for 5 seconds, the lighting mode is then displayed (as below). N.B. it may also show 'LU':



2. Press the 'SET' button to move past the lighting mode.
3. Display contrast mode is then displayed:



4. Press the 'SET' button again to move past the display contrast. The carbon filter counter is then displayed (below shows the filter has been commissioned for 28 days):



5. Press the ON/OFF button to reset the counter, the display should then show zero and the filter icon should disappear. This will count up to 365 days, at which point the filter icon will display.
6. After 15 seconds the display will automatically return to the cabinet temperature, or press the 'set' button to return instantly.

If you have set the Filter Counter correctly, the filter icon  will appear on the screen to advise when it is time to change the filter.

## CARING FOR YOUR EUROCAVE WINE CABINET

### CLEANING YOUR CABINET

When you replace your filter, it is a good idea to also clean the cabinet.

If you have a back-ventilating unit we recommend giving the back a gentle vacuum to remove all dust from the back of the unit. This will keep the air flowing properly. The same is applicable for front-ventilating units.

To keep the inside clean, we recommend taking out wine and shelves and wiping down the walls of the wine cabinet with a damp cloth and mild soapy water.

### EXCESSIVE MOISTURE?

A bit of moisture in the cabinet is normal, however if you have excessive moisture there are some common causes:

- Wine bottles wrapped in tissue paper or cardboard and wooden boxes are not recommended to be placed in cabinet as they will retain water.
- The door seal is not sealing properly.
- The door has been left open for an excessive period of time.
- The unit is located in a high-humidity area e.g. kitchen.

### MOVING HOUSE?

If the cabinet is transported, it **must be empty of wine and shelves** (you may leave the runners attached to the cabinet wall).

It **MUST** be kept upright during vehicular transport. Never lie it down on its side or back.

Once the cabinet is in its final placement, wait 48 hours before switching on.

**For more information refer to the FAQ section of our website:**

<https://www.eurocave.com.au/faq/>